

# Flexcel NX Mid/Narrow Laminator - Troubleshooting

Answer ID 34357 | Published 2011-05-20 09:13 PM GMT | Updated 2015-01-30 06:11 PM GMT

## Find Answers

## Troubleshooting for Flexcel NX Mid/Narrow Laminator

Choose a keyword to go to troubleshooting or other technical information associated with it.

<a href="#">buttons/switches</a>	<a href="#">imaging</a>	<a href="#">loading</a>
<a href="#">carriage</a>	<a href="#">installation</a>	<a href="#">plates</a>
<a href="#">delamination</a>	<a href="#">lamination</a>	<a href="#">see also</a>

### Buttons/switches

- [The LAM button does not blink](#) (03 Jun 2008)
- [The VAC button does not blink](#) (03 Jun 2008)

### Carriage

- [The carriage stops moving when it reaches the NXH cover sheet](#) (03 Aug 2009)
- [The plow gets stuck during the peeling process](#) (17 Sep 2008)
- [The carriage vibrates and does not move to HP](#) (31 Jul 2008)

### Delamination

- [The delamination process fails](#) (01 Jan 2009)

### Imaging

- [Artifacts appear in thin lines parallel to the laminating roller](#) (14 Jan 2010)
- [Horizontal lines appear on the image](#) (14 Aug 2008)

**Installation** - For answers relating to installation, in the **Search Answers** tab, under **Category**, select **Installation & Setup**

### Lamination

- [The TIL lifts up during lamination](#)
- [The TIL and NHX media are uneven by more than 1 mm](#) (28 Feb 2010)
- [The NHX cover sheet laminates onto the TIL](#) (08 Jun 2009)

### Loading

- [The NX plate moves along with the carriage](#)
- [The lamination roller is sticky](#)
- [Wrinkles appear on the laminated plate and/or the TIL is difficult to load](#) (31 Jan 2010)
- [Dirt appears between the TIL and NXH or the TIL is scratched and difficult to load](#) (31 Jan 2010)
- [The TIL media does not feed properly into the rollers](#) (17 Dec 2008)

### Plates

- [A line of air bubbles appears 50 mm from the leading edge of the laminated TIL](#) (15 Dec 2008)
- [Bubbles appear on the plate](#) (14 Aug 2008)

## Answer Detail

### Note

No Recent Updates

### Products

[Computer-to-Plate \(CTP\)](#)  
[Packaging](#)  
[FLEXCEL NX](#)  
[Mid/Narrow](#)  
[Laminator](#)

### Categories

[Troubleshooting](#)  
[Error Messages](#)  
[Image Quality](#)

### Security Classification:

Confidential

### Access levels:

Everyone Internal  
 FLEXCEL Dealer

see also

- [PLC LEDs diagram \(S/N 1-49\)](#) (03 Jun 2008)
- [PLC LEDs diagram \(S/N 50+\)](#) (21 Nov 2010)

Was this answer helpful?

- 

Answers others have viewed

- [Service Guide for Flexcel NX Mid/Narrow Laminator \(S/N 50 and higher\)](#)
- [Flexcel NX Mid/Narrow System links](#)
- [Flexcel NX Mid/Narrow Laminator FRU Parts List](#)
- [The Carriage Stops Moving When It Reaches the NXH Cover Sheet on Flexcel NX Mid/Narrow Laminator](#)
- [Flexcel NX Mid/Narrow System Procedures](#)

Previously viewed answers

- [Flexcel NX Wide 5080 Laminator - FCO 512-00756A: Replacing the Carriage Pulleys](#)
- [The roller lever does not move smoothly on Flexcel NX Wide Laminator](#)
- [The Carriage Stops Moving When It Reaches the NXH Cover Sheet on Flexcel NX Mid/Narrow Laminator](#)
- [Accessing Flexcel NX Wide laminator components](#)
- [Flexcel NX Wide Laminator - FCO 512-00755A: Replacing the Carriage Pulleys](#)

 Print  Notify Me