

Assembly view reference

As you define and edit an assembly's properties in the Product Intent dialog box, **Assembly** workspace, **Properties** pane, and **Products** list, the corresponding settings are updated in all of these areas.