


## Deleting plate or print curves

1. Click the **Plate Curves** or the **Print Curves** tab.
2. Find and select the curve that you want to delete.
3. Click the **Delete** icon .