

Adding a physical device

You can add a physical device used for printing, such as an offset printing press, a flexographic printing press, an inkjet printer, a digital press, and a halftone proofer.

1. Click **View > Devices** or double-click the viewer window.
The **Devices** dialog box appears showing all of the devices that have been defined for your shop.
2. In the **Device Name** box, type a meaningful name for the device so that it can be identified.
3. In the **Device Type** list, select the device type. The device type determines what types of properties can be associated with the device.
4. Click **Create**.

The device you created does not contain any operating conditions, such as the paper, inks, and other parameters that it uses to print. Before you can [determine the color response of this device](#), you must [define its device condition](#). One device can be associated with many device conditions.