

Controller administration

In Proofer Administrator, use the following tabs in Controller view.

- [Opening Proofer Administrator using the IP address or name](#)
- [Software](#)
- [License](#)
- [Settings](#)
- [Events](#)