Viewing a detailed list of licensed features

In addition to viewing the licensed products and product parts that are listed on the **License** tab, you can view a detailed list of features that are licensed to a particular license key and dongle.

- 1. In Proofer Administrator, click the **Controller** icon, and click the **License**
- 2. Select a license key.
- 3. Click **Advanced**, and view the list of licensed features.

Parent topic: License