

Checking the proofer

You can use the Service window to check the status of the proofer and identify current errors.



1. In Proofer Viewer, click the **Maintenance** button.
2. Click the **Service**
3. In the **Service Tree**, navigate to **Procedures**> **Check Proofer**.
4. Click **Go**.

The proofer software runs a test to see if there are any errors in the system. Any outstanding errors are listed in the **Status** box at the bottom of the screen.

Parent topic: [Using the service window](#)