

Failing over and restoring a tertiary server

This section describes failing over and restoring a tertiary server. It is significantly different from failing over a primary server, and does not involve any actual changes to Prinerger.

- [Switching over to the failover tertiary server](#)—When the tertiary server fails, the **PrinergerJobs** replication job will be in an error state and have an activity type of **Failover condition met**. To regain access to the files on the tertiary server, a failover to the failover tertiary server must be initiated. When failed over, the server name and IP address of the regular tertiary server are added to the failover tertiary server causing it to assume the original tertiary server's identify.
- [Switching back to the original tertiary server](#)