Finding the monitor luminance

Ensure the monitor luminance is set to a fixed value. For information about setting the monitor luminance, see the *Matchprint Virtual Quick Start Guide* for your configuration.

- 1. At the Dock, click the Matchprint Virtual folder icon .
- 2. Select **MVCalibrator** and in the MV Calibrate window that appears, on the right-hand side, click .
- 3. Verify that the luminance mode is set to **Fixed Luminance**—the fixed luminance value that was measured during calibration is displayed by the **Luminance Adjust** slider and box.

Note: To avoid luminance variations and an ever-decreasing luminance level—to which the viewing booth must repeatedly be matched—do not select **Maximum Luminance Method**.

4. Click Quit.