

Device section of the Loose Page Output process template

This process template section identifies device-related parameters for the output during loose page output.

Output Type

Select **Absolute File or Printer** to enter the path for a specific network device or file location.

Select **Job-Relative File** to enter a path that is relative to the location of the job folder.

Note: The default is **Job-relative file** and the **Device Path** box default is %JOB%.

Typing a path for a network device in the **Device Path** box automatically sets the **Output Type** to **Absolute File or Printer**.

Submit as Multiple Print Jobs

Select to submit a separate job for each surface that is output.

Available when **Absolute File or Printer** is selected as the **Output Type** or when the **Delta** option in the **Render** section is enabled.

Device Path

The default setting depends on the value selected as the **Output Type**.

- If **Output Type** is **Absolute File or Printer**, the default is **Clear**. Type the name of a Windows NT network output device using the UNC (Universal Naming Convention) path, or click **Browse** to select a file location.
- If **Output Type** is **Job-Relative File**, the default is **%JOB%Proofs**. The default value places the output in the `Proofs` folder of the job that creates the process. You can change the `Proofs` folder to any subfolder found in a job folder.

You can also include the following marks in the **Device Path** box:

- `$_[jobname;n]`
- `$_[ProcessPlanName;n]`

Note: Replace the `n` in the marks name with a number between one and 99 to specify how many characters from the associated mark to include in the mark. Single digit numbers (1-9) must be preceded with a 0 in order to work correctly. That is, 1-9 must be expressed as 01, 02, 03, and so on.

For example, `%JOB%Proofs\$_[jobname;06]` for **MyJobName** becomes `%JOB%Proofs\MyJobN`.

Mirror Print

Select to output media with the emulsion side down.

Negative Print

Select to output a negative image.

Cut Media

Select when you want the device to automatically cut the media.

Available when a device with a media cutting system is selected in the **Output To** list.

Load Media

Select when you want the device to automatically load the media.

Available when a device with a media loading system is selected in the **Output To** list.

Unload Media

Select when you want the device to automatically unload media.

Available when a format for a device with a media loading system is selected in the **Output To** list.

Manually

Select when you want the device to prompt the operator to load the device manually.

Available when a format for a device with a media loading system is selected in the **Output To** list.

Media Unload Mode

Select the mode for unloading media.

Available when a format for a device with a media loading system is selected in the **Output To** list. See your device's documentation for more information.

HPRTL Device

If you have a Hewlett-Packard device, select **HP**.

If you have the Iris 43WIDE device, select **Iris/Mutoh**.

HPRTL is a raster file format developed by Hewlett-Packard and used by a number of device manufacturers.

Available when HPRTL is selected in the **Output To** list.

Proofer Name

Dynamically lists all of the proofers discovered on the network. Type or select the name of the particular proofer to which you want to send the proof.

The name may include both the proofing controller's name and the proofer name in a ControllerName/ProoferName format.

Available when **Veris/Matchprint Inkjet** is selected in the **Output To** list. For more information about proofers, see the proofer documentation.

Proofer Model

A read-only box that describes the type of proofer selected in the **Proofer Name** list.

Number of Proofs

Type the number of copies that you want printed.

This box applies only when **Output To** is set to **Veris/MatchPrint Inkjet**.