



Removing a size from a substrate

1. In Workshop, from the **Tools** menu, select **Setup**.
2. In the left pane, click the arrow next to **Material**, to expand the **Material** section.
3. Click **Substrate**.
A list of the available substrates is displayed in the center pane.
4. In the center pane, select the name of the substrate.
5. On the **Sizes** tab, select the size that you want to delete, and click the **Delete**  button.
6. On the toolbar, click  **Save**.