

Modifying the default values of a digital device's settings

The tabs below the settings (**Screening**, **Finishing**, **Printing Params**, **Job Setup** and **Substrate Options**) in the Digital Device dialog box contain detailed settings loaded from the digital device.

To define the default values of some of these settings, perform the following actions:

1. In Workshop, from the **Tools** menu, select **Setup**.
2. In the left pane, click the arrow next to **Equipment**, to expand the **Equipment** section.
3. Click **Digital Device**.
A list of the available digital devices is displayed in the center pane.
4. In the center pane, select the name of the digital device whose default values you want to modify.
5. In the right pane, change the selected check boxes of settings in the **Screening**, **Finishing**, **Printing Params**, **Job Setup** and **Substrate Options** tabs.



6. On the toolbar, click **Save**.

The value you selected will appear as the default value of the setting in the Digital Job Ticket Editor.