

Getting the current error

You can use the Service window to check the current error.



1. In Proofer Viewer, click the **Maintenance** button.
2. Click the **Service**
3. In the **Service Tree**, navigate to **Procedures**> **Get Current Error**.
4. Click **Get Current Error**.
5. Click **Go**.

The proofer software retrieves the current error and displays it in the **Error** field at the bottom of the Service window. Once you have dealt with the current error, you need to clear it.