

# License tab

## Options

### Remove

Removes the selected license key from the system.

### Dongle ID

Opens a dialog box that displays the dongle identification number. Give this number the service representative when ordering a new license.

### Advanced

Opens a dialog box that lists all available features activated by the dongle that is currently plugged in.

### Export

Opens a dialog box that lets you export the license key to a file.

### Get License

Uses PLAS (Product Registration and License Activation System) to add a license key that controls which features are available in Kodak Proofing Software.

When the Proofer Controller is connected to the Internet, PLAS can retrieve a new license key and add it to the Proofer Controller. Alternately, you can manually access the PLAS Web site or contact a service representative to obtain a license key, and use the **Get License** button to manually load the license key from a file.

## Table headings

### License Key

Shows the unique license key number that activates a set of proofing features. To purchase a new license key, contact a service representative.

### Expiry Date

Shows the date the license terminates, after which the features included in this license key are no longer available. Most purchased licenses never expire. Contact your service representative to purchase a license.

A license with an expiry date usually indicates an evaluation license.

### Part Number

Each license key has a unique part number.

## **Part Description**

Describes the feature set the license key activates.

## **Instances**

Describes the feature set the license key activates. A license key enables and disables various aspects of the software.

The Instances column uses a number to indicate whether an item is enabled. Number 1 indicates the aspect of the software is turned on. A number 2 or greater number indicates how many instances of the software aspect are supported.