



Loading sheets on Epson x700 and x900 printers

This topic describes how to load sheet media on Epson 7700, 7900, 9700 and 9900 printers

Requirements:

- The media type must be set in Proofer Viewer for the device.
- You must know which side of the paper is the front, and which side is the back.

1. In the Proofer Viewer, click the **Queues**  button.
2. In the Proofer Queue, click the **Pause**  button.
3. Close the printer cover.
4. On the Epson Stylus Pro printer, press the **Paper Release** button.
5. Press the **Paper Source** button several times to select the sheet media type.
6. Press the down arrow () key to reduce the loading vacuum to a minimum.

On the control panel, the blue bar indicates the level of vacuum.

7. Feed the front side of the sheet media into the printer.