

Define the default Color Output for Prinergy

If you have created multiple conversion methods for the SCO, you can select one as the default Color Output for Prinergy.

1. Click the **Color Setups** tab, and then click the desired color setup from the list to show it in the viewer window.
2. In the **Color Setups** viewer, click the **Conversion** icon  between the PCO and the SCO.
3. In the **Conversion Edit** dialog box, click the **Edit** icon  next to the **Output Version** drop-down list.
4. Select the radio button for the desired version.
5. Click **Close**.