

Review questions: Create Automatically Sized Substrates

1. Give an example of when you would want Pandora to automatically create substrate sizes.

You may receive a die from a die maker, and want to reduce wasted paper by using the size of the die to determine the size of the substrate.

2. Where do you specify the default settings for automatically creating substrates when adding job elements to the layout?

In the Preferences dialog box on the **Substrate** tab.

3. What job elements are used to create automatically sized substrates?

Die, plate, film, or Step and Repeat.

4. What is the purpose of the **Always create substrate with these default settings** check box in the Preferences dialog box?

Selecting the **Always create substrate with these default settings** check box always creates substrates based on your settings in the Preferences dialog box.

Clearing the **Always create substrate with these default settings** check box prompts you to specify the size of the margins when adding the die, plate, film, or Step and Repeat to the job.