


Show trapping layer

To display or hide the trapping layer, in the Preview window, click the side menu and select **Show trapping layers**. The system default is to have **Show trapping layers** selected, with the trapping layer displayed in the preview window. Click again to cancel this selection. The preview window will then update, and the trapping layer will be hidden.

The image shows the preview with the trapping layer displayed:

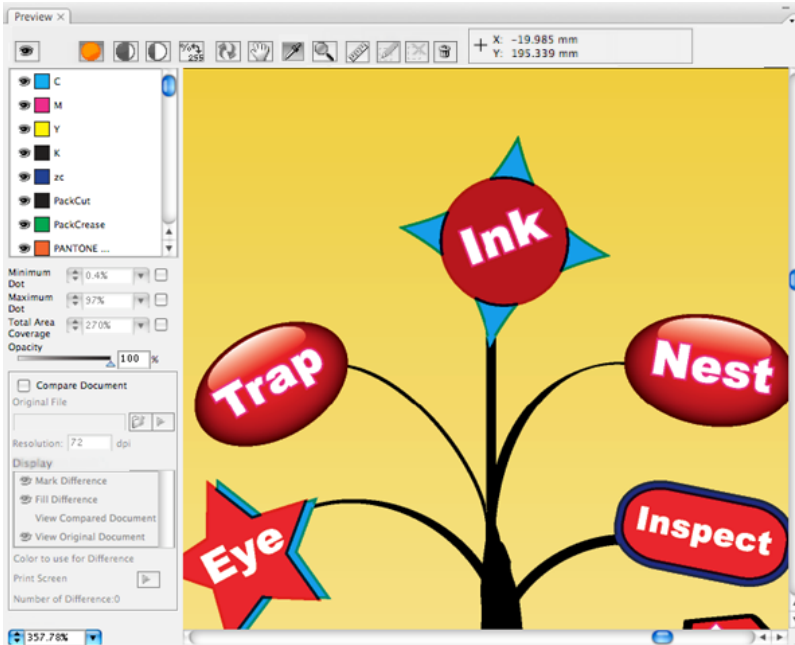

This image shows the preview with the trapping layer hidden:

