





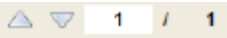


# Pages workspace

Use the workspace in the **Pages** view to check the alignment of the content within the trim box. You can reposition the content by dragging the page, or fine-tune the positioning by directly editing the dimension text boxes.

- To display a page in the workspace, select it in the **Pages List**. Selecting a page also displays its settings in the **Properties** pane.
- To quickly select all pages, all odd or even pages, or a range of pages in the **Pages List**, right-click a product or part, and select an option.
- To control which details are displayed in the workspace, use the [View menu](#) and the workspace toolbar.

<b>Page trims</b>		<p>You can view the following trims:</p> <ul style="list-style-type: none"><li>• <b>Trim box:</b> Dark blue rectangle that initially represents the PDF file or the default page size for a placeholder page. After the run-list page is placed on a press run, the trim box is derived from the template page.</li><li>• <b>Bleed box:</b> Red rectangle that is relative to the trim box</li><li>• <b>Page size:</b> Green lines that show a PDF page relative to the trim box, adjusted when you reposition, rotate, or scale the PDF run-list page</li><li>• <b>Planned page size box:</b> Pink rectangle that appears only if specified for an assembly's product intent</li></ul>
<b>Select</b>		For pages that are already assigned to a layout, use this tool to select and drag the trim guides to reposition the content within the trim box.
<b>Rotate</b>		Rotates the content of the previewed page in 90-degree increments without changing the template-page orientation
<b>Pan</b>		Moves your view of the workspace
<b>Zoom</b>		Click the object or general area that you want to inspect more closely, or drag a marquee around a specific area.
<b>Show Page Previews</b>		Display a preview of all page content.
<b>Show Dimensions</b>		<p>Displays the page dimensions, including any distances between the template-page trim box and the PDF content trim box.</p> <p>You must select <b>View &gt; Show Trim Box</b> to use this option.</p>

<b>Page preview navigators</b>		<p>Select a page in the <b>Pages List</b> to display, and then use the arrow keys to scroll through the other pages in the current list.</p> <p>The text box displays the run-list number of the currently previewed page, followed by the total number of pages in the current list.</p> <p>To jump to a specific page within the current list, type its run-list number in the box.</p>
--	---	---