

Setting layout preferences

Use layout preferences to define settings for the selected layout.

You can also access **Layout Preferences** when you first create a layout. In **Layout Preferences**, **Dieline Settings** can be changed at the Job Level and only affect that given job.

1. To access layout preferences, in Layout Automation Manager, on the **Status** tab, double-click the layout that you want.
2. In the layout dialog box, click the **Layout Preferences** icon.