

Konica Minolta

For [Konica Minolta qualified with JDF Bi-Directional connectivity](#) please see [New JTE Workflow - JDF/JMF with Device Track and Setup](#)

Set up a JMF connection between Prinergy Workflow and the Konica Minolta bizhub digital press.

- [Connect Prinergy to Konica Minolta](#)
- [RBA—Add Web-to-Print sample rules \(Konica Minolta\)](#)
- [Test the setup for Konica Minolta](#)

If your Prinergy server is on a network that uses a proxy server, you must bypass the proxy server in order to connect devices to Prinergy.

To do so, go to **Control Panel > Internet Options > Connections > LAN Settings**, and select the the **Bypass proxy server for local addresses** check box.

Note: You can also access this check box from the **Tools** menu in your Internet Explorer browser (**Tools > Internet Options > Connections > LAN Settings**).