

Job Planning preferences

Enable job planning mode

To plan and output a corrugated job, you must select this check box. This will enable the Job Planning icon in the toolbar, which allows you to access sleeve planning mode.

Min gap size between slugs

Type a value for the minimum gap allowed between slugs.

Min slug size

Type a value for the minimum size allowed for a slug.

Min gap size between marks

Type a value for the minimum gap allowed between marks.

Registration mark size

Type a value for the size of the registration marks that are added to the slugs.

Registration mark thickness

Define the thickness of the mark line.

Auto-fit margin

Type values for the left/right margin and top/bottom margin that are added around the data when you create a slug and use the **Auto-Fit Slug** option.

Automatically fit new slugs

Select this check box to apply the **Auto-Fit Slug** option whenever you create a new slug.

Automatically arrange slugs when switching to existing layout

Select this check box to arrange the slugs you created automatically on the layout when you want to place them on an existing layout.

Close the preview window when switching to this mode

Select this check box to close the preview window when switching to the job planning mode.