

Selecting the default RIP for new jobs

Change the default RIP that all new jobs use and control whether it is possible to generate a plate with a different RIP than the RIP used to generate a proof.

1. From the **Tools** menu, select **Configure System**.
2. Click the **Job Creation Defaults** tab.
3. From the **RIP Name** list, select **Adobe PDF Print Engine** or **Adobe CPSI**.
4. From the **Final Output Handling When Proof RIP is Different** list, select **Warn when Proof RIP is different** or **Fail when Proof RIP is different**.
5. Click **OK**.

All new jobs will use the settings that you specified. Existing jobs remain unaffected.