

# (Optional) Configuring InSite Prepress Portal, InSite Storefront, and PressProof

If you have Prepress Portal, Storefront, or PressProof connected to your primary server, you must run the InSite Configuration Utility (ICU) after the upgrade, and also check the job share and file share in InSite Administration.

1. On the InSite/PressProof server, open a command-prompt window.
2. Type `icu`.  
The InSite and w3svc services stop, and the ICU wizard appears.
3. Click **Next**.
4. On the Prinergy primary server Info screen, confirm the name and IP address of the primary server. If incorrect, type the correct server name and/or IP address.
5. Click **Next** until the **Configuration Summary** screen appears.
6. Click **Apply**.
7. When configuration is finished, click **Next**, and then click **Close**.
8. Click **Close**.
9. Open a command line and type `net start insite`.
10. Type `exit`.
11. Click the **InSite Administrator** shortcut on the server desktop.
12. Select **Configuration Settings > Workflow**.
13. In the **Job Server for InSite Jobs** box, check that the name of the primary server is correct. If incorrect, type the correct server name.
14. In the **Job Server Share Name** box, check that the name of the job share is correct. For example, `AraxiVolume_<ServerName>_J` (where `ServerName` is the name of the primary server).
15. Click **Update**.