

# Activity 1: Create a come-and-go layout

## Come-and-go layouts

In a come-and-go job, the entire run list flows twice through the same press runs, which are automatically divided into two press-run sections. The template pages are numbered so that the run list first flows through the first section in run-list sequence, and through the last section in reverse sequence. The resulting two identical books are perfect-bound together on a common edge, and then cut apart.

## Creating a come-and-go layout

1. In the **Assembly** view, **Products** pane, click the part.  
The **Part Properties** pane appears to the right of the workspace.
2. In the **Part Properties** pane, in **Planned Page Count**, type 64.
3. In the **Binding Style** list, select **Come and Go**.
4. In the **Largest Section** list, select **8pp**.
5. Select all eight sections in the workspace.
6. In the **Section Properties** pane, from the **Fold Pattern** list, select **JDF-F8-1**.
7. Switch to the **Press Runs** view.
8. Click **Generate Press Runs**.
9. Select **File > Save** and save the job.