

Automatically sizing Flexo Plates

You can have the Pandora software automatically size a Flexo plate based on the substrate size added to the job plus margins that you specify.

Important: The settings in [Preferences > Automatically Sized Substrates with the FlexoPlate](#) selection must already be configured. When this selection is used, the other **Auto Sized Substrate** options are deselected and inactive.

1. Drag a substrate from the **ShopMap** palette into the job.
The Create Plate dialog box appears.
2. In the **Height and Width** area:
 - a. Type the dimensions of the plate required if not accepting the defaults.
 - b. In the **Units** list, select millimeters, centimeters, or inches.
3. Click **Yes**.

The Flexo plate appears on the layout with the substrate.

Note: If a Press has been attached to the substrate, there will be a warning message: Auto Flexo Plate selected, but a Press has been attached to substrate. All Press offsets will be ignored.