

Controlling dieline types

You can control which elements of your die file the Pandora software displays in the **layout** view. You can dynamically turn line types off and on, and can also choose to view all lines in the die, even if they fall outside the die stations. This means you can view any lines in a die representing elements such as registration marks, die corner marks, or substrate boundaries.