

Removing JTPs from system pools

If you want to have a set of JTPs reserved for urgent processes or for remakes, you must remove JTPs from JTP system pools. For more information, see [Using single JTPs for urgent processing](#).

1. From the **System** menu, select **JTP Status**.
2. In the JTP Status dialog box, select the JTP you want to remove from the system pool.
3. From the **System** menu within the dialog box, select **Remove from Pool**.
4. Follow the on-screen prompts.

Use the **Configure menu > Process Templates** to select which JTPs to use.