

# Setting up a tower-color profile

1. Using a text editor, open the sample tower-color file (`ColorTowerMap.txt`).
2. Type the names of the color separations in the job files, as well as the number of the color tower running each color. For example, `Yellow 1`.

If a color separation is missing from the tower-color file, or if Prinergy Evo can't find a tower-color file, Prinergy Evo will fail the process (when you apply a web-growth-enabled process template to an imposition that has a profile associated with it).

3. Do not use the following characters in the color names:
  - Leading or trailing tabs or spaces
  - Tabs embedded in the file name
  - Wide characters such as CJK (Chinese, Japanese, Korean) characters
4. Save the tower-color file as `ColorTowerMap.txt`.

The tower-color file must have this name for Prinergy Evo to be able to find it.

You can save the tower-color file stored in the same folder as the profile file. This will be the default tower-color file. You can also create a custom tower-color file for a job, and place it in the `<Job Folder>\Control` folder. Prinergy Evo first searches the `<Job Folder>\Control` folder for a tower-color file. If it can't find a tower-color file in the job folder, it will use the default tower-color file from the same folder as the profile file.