

Configuring Prinerger Evo for default separation order

You can configure the default order in which separations will be created in output processes. This is useful for sites with a press with an automatic plate exchanger, where operators need to have the plates ready in the right order, to be quickly loaded onto the press for short press runs.

1. Make sure Prinerger Evo Server software is running.
2. Start Prinerger Evo Client software.
3. From the **Configure** menu, select **Default Separation Order**.
4. In the Default Separation Order dialog box, click the arrows to move a separation up or down in the list.

The order in which the separations appear in the list reflects the order in which their corresponding plates will be output.