

Selecting Kodak proofers

Prinerger Evo software detects all of the Kodak proofers on the network. Before you can use a proofer, add it in the Select Kodak Proofers dialog box. When you have successfully added a proofer, it appears in the output from PDF, output from imposition, and output from PostScript process templates.

To do this	Do this
Add a Kodak proofer	1. In the Prinerger Evo Administrator, click the Tools tab. 2. Click Kodak Proofers. 3. In the Select Kodak Proofers dialog box, select one or more proofers in the Visible Kodak Proofers list and click  to use the proofers. To select all of the proofers in the Visible Kodak Proofers list, click . If the name of the proofer that you want does not appear in the Visible Kodak Proofers list (this may happen if the proofer is in a different subnet than the Prinerger Evo Administrator), you can add its name by clicking Use. Note: When manually adding the name of a proofer, ensure you type its name correctly. Otherwise, the server will not correctly appear in the Process Template Editor. 4. Click OK. Important: Before the proofers are available to use, restart the Prinerger Evo Administrator by clicking Restart on the System tab. The restart process may take a few minutes. 5. To double-check that the server has been successfully added, open the Process Template Editor in Prinerger Evo software and complete the following steps: a. Open an output from PDF process template. b. From the Output To list, select Kodak Proofers. c. In the Device section, ensure that the proofers you just added appear in the Proofer Name list.
Remove a Kodak proofer	1. In the Prinerger Evo Administrator, click the Tools tab. 2. Click Kodak Proofers. 3. In the Select Kodak Proofers dialog box, select one or more proofers in the Kodak Proofers to Use list and click Remove. 4. Click OK. Important: After the proofers are removed, restart the Prinerger Evo Administrator by clicking Restart on the System tab. The restart process may take a few minutes.