

Configuring Prinergy after installation

After your Prinergy system is first installed, you need to configure several aspects of the system, such as servers, user rights, and so on.

[Licenses](#)

[JTPs](#)

[Users](#)

[Servers](#)

[Adding proofing devices](#)

[Adding plating devices](#)[RBA setup](#)

[Preferences](#)