

Manually enabling a licensed feature

Some licensed features must be manually enabled before they can be used.

You must manually enable some licensed features before the feature can be used, even though the feature may be listed in the Prinerger Licensed Information dialog box. For example, JTP features such as screening options in output JTPs must be enabled manually. These features are enabled on a JTP-by-JTP basis.

1. On the Prinerger primary server, in the right pane of the Prinerger Administrator main window, select the **JTPs** tab, if it is not already selected.
For example, if you purchase a license for a new type of screening, configure an output device JTP such as the Proofing Device (512 MB) type of JTP.
Note: Select a JTP, rather than a JTP pool. The **Type** column in the right pane indicates which items in the list are JTP pools, and JTPs have an entry in the **Server** column, while JTP pools do not.
2. With the JTP selected, from the Prinerger Administrator main menu, select **JTP**.
3. From the submenu, select **Properties**.
4. In the JTP Properties dialog box, select the features for which you purchased a license.
5. Click **OK**.
6. Stop the JTP and then start the JTP in order for the feature to take effect.

After you enter all licenses, [save a copy of the license information](#) and keep it in a safe place. If a license is accidentally removed or if the dongle is damaged, you will need this information.