

Adding JTPs

Add a JTP to perform a specific type of processing on a specific server in your Prinergy system.

1. From the **JTP** menu, select **Add JTP**, and then select one of the following types:
 - **Archive**
 - **CopyJob**
 - **Generate**
 - **Import/Export**
 - **Output**
 - **Refine**
2. For archive, output, and refine JTPs, select a specific JTP in the **JTP Type** box:

For this type	Select one of these JTPs	
Archive	• Archive/Retrieve	• Disk Purge
Output	• Bridge - Delta Technology • CTLWOutput • Expose • Heidelberg Primesetter • Heidelberg Signasetter • Print Console • Proofing Device (256 MB) • Speedway Engine Manager • VectorOutput	• Copydot • DOP • Heidelberg Herkules • Heidelberg Quasar • PostScript Level 3 • PrintLink • Proofing Device (256/512 MB) • Proofing Device Extended • Topsetter Engine Manager • Insite Proofing Device
Refine	• CEPSCConversion • Copydot • Optimize	• Color Matcher • Normalize • Trap • Insite Color Match

Note: Some JTPs, such as Printlink and CTM Transform, can be added only once. If they already exist, they no longer appear in the **JTP Type** box.

Note: Whether you add a Copydot JTP under the refine type or the output type, you can use the Copydot JTP in both output and refine process templates.

3. In the **Name** box, type a name for the new JTP.

Note: You cannot change the name of the PrintLink, Archive/Retrieve, or Disk Purge JTP.

Tip: To help you easily identify the JTPs in your system, include the following information:

- JTP type—for example, Normalize
- Location or server—for example, ServerA
- Other unique identifiers—for example, the options selected for the JTP. This will help you select only JTPs with the same options when adding JTPs to a pool.

Example JTP names: Normalize ServerA, Render_Staccato.

4. In the **Host Server** list, select a server to add the JTP to.

Note: For an Archive JTP, select the server that is connected to the archiving device.

5. For certain JTPs, next to **Features**, select the check boxes for specific features:

For this type of JTP	Select
Import/export	• Import Unpopulated Job Ticket to import a blank imposition plan with blank pages assigned to page positions • Import Populated Job Ticket to import an imposition plan with job pages already assigned to page positions • Import Job File to import a compressed file containing all or part of a job that was exported from another Prinergy system • Export to export all or part of a job to a compressed file for use in another Prinergy system • Import Pageset to import a compressed file that was exported from the Page Assigner
Copydot	• Refine Copydot Improvements to detect copydot files and optimize them for use in Prinergy. Always select this option. • Descreen/Resample Copydot to descreen and resample copydot files to the output resolution specified in a process template • Calibrate Copydot to control dot gain calibration by selecting a calibration curve in a process template
DOP, Expose, Heidelberg devices, Print Console, Proofing devices, and Topsetter	• Staccato 20 Series • Staccato 10 Series • Staccato 25 Series • Maxtone Screening • Seamless Screening • DigiCap • Hyperflex Basic • Hyperflex Advanced
PrintLink	If you have a site license for PrintLink, select the Printlink: Site check box.

VectorOutput	• VectorOutput: DCS 2 • VectorOutput: Separated PS • VectorOutput: PDF
--------------	--