

# Selecting a network card on the primary server

If the Prinergy primary server has more than one network card, select the network card that you want Prinergy to use to access the LAN.

You must log on with an account that has administrator privileges.

An example scenario: If you install a new Prinergy primary server which you connect to an output device (for example, a Kodak Magnus platesetter) using a GMCE connection, often the IP address of the output device NIC (Network Interface Card) is loaded onto the registry instead of the IP address of the NIC that Prinergy uses for network access. Use this procedure to correct the registry.

1. From the **Tools** menu, select **Configure System**.
2. In the **Configuration Options** dialog box, select the **Network Cards** tab.
3. In the **Select IP address to use** list, select the network card that you want to use, and click **OK**.

The registry is updated to use the selected NIC for Prinergy network data transmission.

**Note:** Many supported models of hardware servers for Prinergy Workflow products ship with multiple NICs. The second NIC in these servers is generally configured as a standby interface in the case of a failure in the selected, active/enabled NIC. Teaming of NICs on a Prinergy server is not officially supported and Kodak makes no claims or guarantees related to successful operation of Prinergy Workflow products with teamed hardware NICs.