

Adding a Kodak proofing device

Add Matchprint Inkjet proofing devices to the Prinergy system manually.

The Matchprint Inkjet proofing devices are controlled by the Kodak Proofing Software on a separate server. With Kodak Proofing Software, you can specify tiling flags and sheet templates that appear in process templates in Workshop.

1. Open Prinergy Administrator.
2. From the **Tools** menu, select **Configure System**.
3. In the Configuration Options dialog box, click the **Kodak Proofers** tab.
4. Click **Add**.
5. In the Add Kodak Proofer dialog box, either select a server from the list or type the UNC path of the server that you want to add, in the format \\servername\sharename.
6. Click **OK** twice.
7. When a message warns you that you must restart the system, click **OK**.
8. When you are ready, restart the Prinergy system on all servers.

When you add a Kodak proofing device manually to the Prinergy system, using Prinergy Administrator, information from the proofing device appears in the **Device** section of process templates in Workshop.

Note: Drivers for the proofing device may be required to be installed on the Prinergy server sending files to a shared print queue.