

Controlling the error messages that Prinergy displays

Determine whether Prinergy displays warnings about server problems or abnormally terminated processes.

- 1. From the **View** menu, select one of the following options:

Setting	Specifies
Notify Abnormal Termination	Prinergy will automatically notify you if a process or processes terminated abnormally.
Show Server Warnings	Prinergy will automatically notify you of any server warnings.