

Plate Remake

In Prinergy Administrator (UADM), open the **Plate Remake** tab and enter applicable values in the following fields.

- Clear plate remake data for a specified job
- Clear plate remake data for a specified plate id
- Set plate remake retention period

Select the Run button and the applicable message will be displayed:

- Plate Remake data is cleared.
- Plate ID data is cleared.
- Retention Period has been updated.