

Ricoh

For Ricoh qualified with JDF Bi-Directional connectivity please see [New JTE Workflow - JDF/JMF with Device Track and Setup](#)

Set up a JMF connection between Prinergy Workflow and the Ricoh digital press.

- [Connect to Ricoh](#)
- [Test the setup for Ricoh](#)

If your Prinergy server is on a network that uses a proxy server, you must bypass the proxy server in order to connect devices to Prinergy.

To do so, go to **Control Panel > Internet Options > Connections > LAN Settings**, and select the the **Bypass proxy server for local addresses** check box.

Note: You can also access this check box from the **Tools** menu in your Internet Explorer browser (**Tools > Internet Options > Connections > LAN Settings**).