

Imposition Plans pane

Note: The columns you see depend on the columns you display or hide.

Name

The name of the element.

For a page, the name is in the form of <input file name>.<page #>.p.

Page

When the hierarchy is opened to display individual positions, this column displays the file name that is assigned to each position.

On the rows that contain information other than positions, this column indicates the number of positions in the surface that have files assigned to them—for example, 4 of 4 Assigned.

Assignment Count

Displays the number of pages assigned to the page position

Workstyle

The workstyle as specified by the imposition plan—for example, **Sheetwise**.

Page Set

The name of the page set to which the imposition plan is linked.

Web Growth Profile Name

Any web growth profile associated with the signature, sheet, or surface.

A web growth profile is an XML file used to digitally compensate for press distortion.

Web Growth Profile Path

The location of any web growth profile associated with the signature, sheet, or surface.

Note: If a web growth profile is specified in Job Manager, this overrides any web growth profile that is defined for the process template.

Center Page

Indicates whether the page is centered.

Offset

The horizontal and vertical adjustments made to the page from the lower-left corner.

This column appears in the **Signatures** pane and the **Pages** pane.

If the page is not centered, the value is the same in both panes.

If the page is centered, the value in the **Signatures** pane is the difference between the **Media Size** and the **Trim Size**.

The unit of measure is defined in the Workshop Preferences dialog box.

Trim Size

The horizontal and vertical measurements to which the page will be cut. The trim size is determined by the page position to which the page is assigned.

If the file is not a PDF file, the value is **N/A**.

The unit of measure is defined in the Workshop Preferences dialog box.

<process template>

The name of the process template group that was used to process the file and the processing status.

This column automatically appears in these panes:

- **Input Files** pane when an input file is processed
- **Pages** pane when a page is processed
- **Imposition Plans** pane when a surface is processed

This is known as a dynamic column. More than one dynamic column may appear if more than one process template is used.

<custom field> (more than one may be visible)

Any custom fields that were created for this job element with the **Show in Workshop** check box selected