

Hub-and-spoke workflow with partial jobs

Your workflow can follow a hub-and-spoke setup where you export a partial job from one Prinergy system and import it into another Prinergy system.

Prerequisite: The .zip file was exported from Prinergy using an ExportIncremental process template. (If you have a complete job, see [Hub-and-spoke workflow with jobs](#) instead.)

1. Create a job or open an existing job.
2. Add a hot folder and associate it with an **ImportIncremental** process template.
3. Drop the export file into the hot folder.
Prinergy adds the export to the existing job. If the imported signature name matches an existing signature name, Prinergy adds 01 to the imported signature.
4. Open the job.
Prinergy displays flats as signatures in **Separations** view.
5. Manage colors separations (optional).
6. Proof the imposition by running an imposition output process template.
7. Make plates by running a final output process template.