

Removing imposition plans

Removing an imposition plan does not delete its associated page sets, pages, and input files. The imposition plan disappears from the **Signatures**, **Separations**, and **Storage** views of Job Manager and references to the files are deleted from the database.

1. In Job Manager, in the **Imposition Plans** pane of the **Signatures** or **Separations** view, select the imposition plan that you want to remove.
2. From the **File** menu, select **Remove Imposition**.
3. If prompted to confirm, click **Continue**.