

Digital Job Ticket Editor—General tab

Note: Options on this tab may vary depending on the selected digital device. Some of the settings or setting values may not be available. Also, there may be additional settings available for specific devices which are not documented here.

The options in the Digital Job Ticket Editor are based on the capabilities of the selected device. When the Prinergy server connects to a digital device via Setup, the device communicates its capabilities in JMF format. The values for the different parameters are updated in the Setup application per device, and are reflected in the Digital Job Ticket Editor. The default value that was set on the digital device (and can be viewed in Setup) is used as the default value per parameter. If no value was set as default, the Job Ticket Editor displays **Device Default**. This selection can be changed.

When you define settings that are in conflict, these settings are marked with a red line around them, and when you hover above them, a tool tip displays what is wrong with the defined settings. You can also click the **Constraints** tab to see which settings you need to change in order to print the job.

Note: If you make a change in the Setup application while the Digital Job Ticket Editor is open, you must close and reopen the Digital Job Ticket Editor to see the change in the Digital Job Ticket Editor.

Name

Displays the name of the document. By default it is the name of the job, but you can change it.

Trim Size

Displays the dimensions of the trimmed page. If you select an imposition or layout, the trim size is the layout size.

Copies

Displays the number of copies to be printed

Printed Sides

Displays whether to print on one side (back or front) or on both sides of the paper—head to head, or head to toe

Substrate Width (For Kodak 900 Print Manager only)

Displays the width of selected Substrate

Virtual Sheet Size (For Kodak 900 Print Manager only)

Select the option to define Print Area for Roll-to-Roll Press

Virtual Width (For Kodak 900 Print Manager only)

Define Print Area Width for Roll-to-Roll Press

Virtual Length (For Kodak 900 Print Manager only)

Define Print Area Length for Roll-to-Roll Press

Binding Edge

Displays whether the binding edge of the page is at the top or left side.

Sample Print

Select whether to print a sample print or not

Priority

For most devices, jobs are processed in the order that they are submitted. You can use this list to select the processing priority for some jobs.

Possible priorities are:

- ☐ Low
- ☐ Medium (default)
- ☐ High
- ☐ Urgent

Hold Job

Select this check box to put the job on hold before printing.

Virtual Printer

Option to choose the Virtual Printer created in Digital Press Front End

Comments (Prinergy 9.0.1 NexPress only feature)

Enter the contents in Comments area to populate in NexPress DFE Comments column.

Automated Workflow

Option to choose the Automated Workflow created in Digital Press Front End