

Digital Job Ticket Editor—Layout tab

Note: Options on this tab may vary depending on the selected digital device. Some of the settings or setting values may not be available. Also, there may be additional settings available for specific devices which are not documented here.

The options in the Digital Job Ticket Editor are based on the capabilities of the selected device. When the Prinergy server connects to a digital device via Setup, the device communicates its capabilities in JMF format. The values for the different parameters are updated in the Setup application per device, and are reflected in the Digital Job Ticket Editor. The default value that was set on the digital device (and can be viewed in Setup) is used as the default value per parameter. If no value was set as default, the Job Ticket Editor displays **Device Default**. This selection can be changed.

When you define settings that are in conflict, these settings are marked with a red line around them, and when you hover above them, a tool tip displays what is wrong with the defined settings. You can also click the **Constraints** tab to see which settings you need to change in order to print the job.

Note: If you make a change in the Setup application while the Digital Job Ticket Editor is open, you must close and reopen the Digital Job Ticket Editor to see the change in the Digital Job Ticket Editor.

Rotate

Select a rotation value to rotate the job by 0° (**None**—no rotation), **90°** clockwise, **180°**, or **270°** clockwise.

Scale

Select **Clip to fit**, **Scale to fit**, or **Reduce to fit**.

Image Alignment

Displays the position of the image relative to the defined printable area. Select **Center** to place the image in the center of the printable area, or **Bottom Left** to align the image to the bottom-left side of the printable area

Front Image Shift X

Shifts the image from the set **Image Alignment** along the horizontal axis.

Front Image Shift Y

Shifts the image from the set **Image Alignment** along the vertical axis.

Apply Front Values

If you select **On**, **Front Image Shift** values are applied to the **Back Image Shift X** and **Back Image Shift Y** settings (with the appropriate transformation to keep the front/back image on top of each other). Select **Off** to set other values in the **Back Image Shift X** and **Back Image Shift Y** settings

Back Image Shift X

Shifts the image from the set **Image Alignment** along the horizontal axis.

Back Image Shift Y

Shifts the image from the set **Image Alignment** along the vertical axis.