

Editing signature ID codes

Add, remove, and modify elements from signature ID codes.

Edit signature ID codes using either the import process template or the Signature ID Code Editor.

1. Open the Signature ID Code Editor: in the **Signatures** view of Job Manager, right-click the desired signature, and select **Change Signature ID Code Template** (or select the desired job and, from the **Job** menu, select **Change Signature ID Code Template**).
2. Under **Create signature ID code template from**, select the desired elements.
3. To manually edit the ID code, under **ID Code Template**, click **Edit**.
4. Under **Sections**, view and edit the sections associated with each signature. If you are using multiple sections for a signature, under **Create signature ID code template from**, select **Signature Number**.
5. To view the ID codes before you commit your changes, click **Preview**.
6. Click **OK**.

Examples:

Description	Context	Signature ID codes (type the signature ID code in one line)	Number of Sections per Signature	Resulting codes
Simple incrementing number code (not available in 4.0.2.1 release)	Job name: 12345 # signatures: 2 # sections per signature: 1 Versions: 01 - English, 02 - French	%00001+1%	1	English signature 1: 00001 English signature 2: 00002 French signature 1: 00003 French signature 2: 00004
Versioned Job	Job name: 12345 # signatures: 2 # sections per signature: 1 Versions: 01 - English, 02 - French	%jobname<-2>% %Version<2>% %Signature<2>%	1	English signature 1: 450101 English signature 2: 450102 French signature 1: 450201 French signature 2: 450202

Multi-section job	Job name: 0027 Text Section # signatures: 5 (signature 3 contains 2 sections)	%jobname<-2>% %signature<2>% %numsections%	1,1,2,1,1	Signature 1: 27015 Signature 2: 27025 Signature 3: 27035 Signature 4: 27045 Signature 5: 27055
Pre-job (with multiple impositions)		%imposition<1>% %version<-2>% %signature<2>%	1	specific to the job (unique)