

Visible Columns dialog box in Page Sets pane

Page Position

The page position number is a combination of the page set prefix and the position number (both user-definable).

You define the prefix when you create a page set or add an imposition plan to a job.

A value appears only if the page has been assigned to a page position on a page set.

Page

When the hierarchy is opened to display individual positions, this column displays the file name that is assigned to each position.

On the rows that contain information other than positions, this column indicates the number of positions in the surface that have files assigned to them—for example, 4 of 4 Assigned.

Assignment Count

Displays the number of pages assigned to the page position

Layered Page Number

Applies to the Layered PDF Versioning feature. For information, see [Versioning](#).

<custom field> (more than one may be visible)

Any custom fields that were created for this job element with the **Show in Workshop** check box selected