

Deleting a digital device (press)

When you delete a device in Setup, the device is automatically deleted in Device Track (in the **Devices** pane) and in Administrator.

1. In Workshop, from the **Tools** menu, select **Setup**.
2. In the left pane, click **Digital Device**. A list of the available digital devices is displayed in the center pane.
3. In the center pane, select the name of the digital device that you want to delete, and click the **Delete**  button.



4. On the toolbar, click **Save**.