

Marks section in the Loose Page Output process template

This process template section determines how marks are handled during loose page output.

Extra Margin for Marks and Bleed

When calculating the position of pages, additional space is included for marks and the bleed, if indicated.

Provide margin values for **Left**, **Right**, **Top**, and **Bottom** margins, in the selected unit of measure.

Bleed for Unassigned Pages

Prints a bleed line when proofing PDF pages that have not yet been assigned to a position of an imposition plan. When assigned pages are proofed, the bleed lines are taken from the imposition plan.

Provide values for **Left**, **Right**, **Top**, and **Bottom** in the selected unit of measure.

Crop Distance Beyond Bleed for Pages

Creates an additional margin beyond the bleed marks to allow output of the software information that is positioned outside the bleed.

Provide values for **Left**, **Right**, **Top**, and **Bottom**, in the selected unit of measure.

This value, and any value that extends the crop beyond the page size, allows the entire page image to be output (up to the page size defined by other layout measurements).

A negative value moves the crop inside the bleed by the specified amount.

If the pages are assigned to page positions linked to an imposition plan, this value is added to the bounding box defined on the imposition plan. If the assigned page positions are linked to multiple imposition plans, the largest bounding box is calculated and this value is added to the calculated measurement.

Default Marks Font

Prinerger can populate variable marks with double-byte characters such as those found in Japanese, Chinese, and Korean.

Here's an example of how you could use the feature:

- a. Create a Preps imposition file that includes a variable mark, such as `[$[PageName]]`.
- b. In Prinerger, in the **Marks** section of the imposition output process template, in the **Default Marks Font** box, type the exact name of the double-byte font that can be used in case the variable mark's original font was not a double-byte font. The font must reside either in a Prinerger-aware font folder or in the job's font search path.
- c. Submit the imposition file to Prinerger.
If the imposition file contains a page name with double-byte fonts, Prinerger outputs the file with these characters.

Sheet Marks

Identify the name and location of a PDF file containing sheet marks (for example variable marks, logo, and signoff line). Click **Browse** to locate and select a file.

Include print curve in calibration

When this check box is selected, the plate curve and print curve are applied to the mark. The curves applied are the ones selected in the **Plate Curve** list and **Print Curve** list in the **Calibration & Screening** section of the process template. When this check box is cleared, only the plate curve is applied. To prevent the application of the plate curve to a mark, select **%%None%%** in the **Plate Curve** list in the **Calibration & Screening** section of the process template.

Locate Sheet Marks Adjacent to

(See [Sheet marks options explained](#) and [Sheet marks on final output](#).)

Select **Left**, **Right**, **Bottom**, or **Top** to determine on which edge of the paper or plate a sheet mark is placed.


The default setting is **Bottom**.

at Distance

(See [Calculating the at distance value on final output](#).)

Determines where, relative to the edge, the mark is placed:

- Sheet marks are placed relative to the plate edge. Depending on the distance you type, you can place the sheet mark on the press sheet or on the plate.
- Page marks are placed relative to the finished page size (the imposition hole).

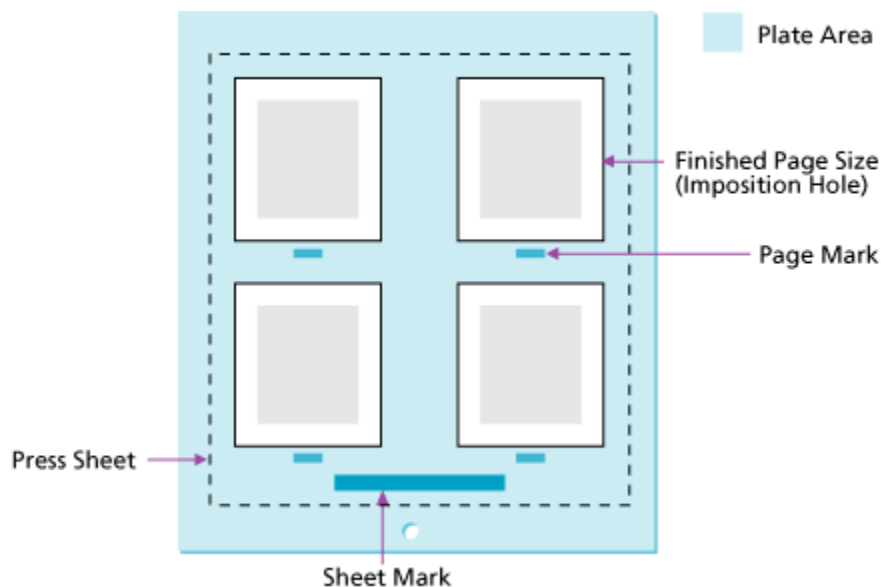

Justified

Select **Left**, **Center**, or **Right** to determine the justification for the sheet mark. The default value is **Center**.

Page Marks

Identify the name and location of a PDF file containing page marks. Click **Browse** to locate and select a file.

You may need to provide space for page marks by increasing gutter measurements.

The variable mark `$(PagePositionNumber)` or `$(PPN)` can be used to verify that the pages are in the correct page set positions in the imposition.

Calibrate

When this check box is selected, the plate curve and print curve are applied to the mark. The curves applied are the ones selected in the **Plate Curve** list and **Print Curve** list in the **Calibration & Screening** section of the process template. When this check box is cleared, only the plate curve is applied. To prevent the application of the plate curve to a mark, select **%%None%%** in the **Plate Curve** list in the **Calibration & Screening** section of the process template.

Locate Page Marks Adjacent to

Select where to place the page marks in relation to the page's trim box.

When you select **Right** or **Left**, the page marks rotate as follows:


- **Left**—rotates the mark 90° counterclockwise
- **Right**—rotates the mark 90° clockwise
- **Bottom**—no rotation
- **Top**—no rotation

at Distance

(See [Calculating the at distance value on final output.](#))

Determines where, relative to the edge, the mark is placed:

- Sheet marks are placed relative to the plate edge. Depending on the distance you type, you can place the sheet mark on the press sheet or on the plate.
- Page marks are placed relative to the finished page size (the imposition hole).

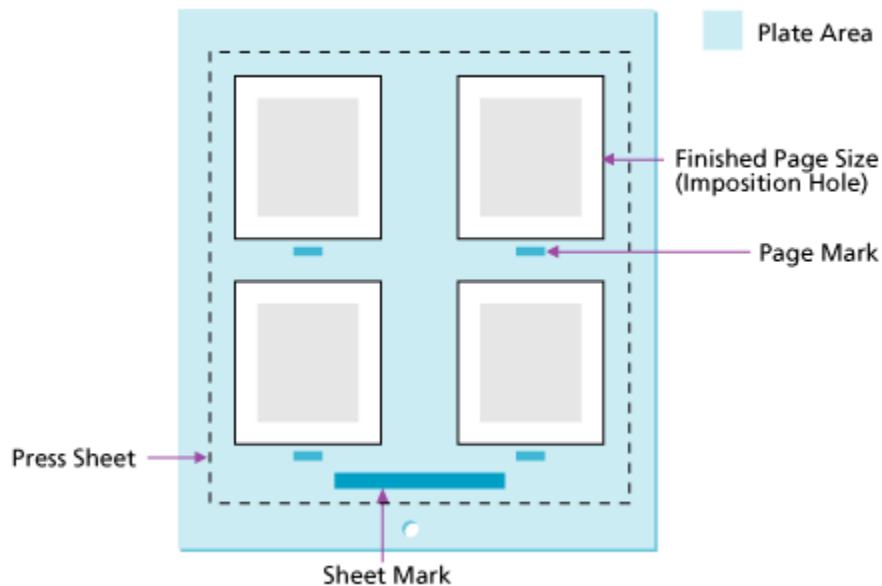

Draw Trim and Bleed Marks

Determines where, in relation to each page, trim and bleed marks should be placed. Trim and bleed marks are created in registration color and are 0.25 points in weight. Bleed marks are solid lines; trim marks are dashed lines. Trim marks are drawn according to the option selected:

None—trim and bleed marks are not drawn.

On Content—trim and bleed marks are drawn on the content (complete trim marks are drawn on the proof).

Outside Content—trim and bleed marks do not extend to the content (only the four corners appear on the proof).

Note:

- In order to print bleed lines on loose page output, the page must be assigned to a page set that is linked to an imposition plan. The bleed lines are taken from the imposition plan.

Safe Protect Box

The safe protect box enables you to print proofing lines within the trim box (or media box) on a proof to check that the page content is within the page margins. The safe protect box is drawn on the proof inside the trim or media box.

This feature is available in the loose page output and imposition output process templates when the **Draw Trim and Bleed Marks** option is set to **On Content** or **Outside Content**.

Note: If you select **Output To Virtual Proof**, you can select the **Safe Protect Box** check box even if you select **None** for **Draw Trim and Bleed Marks**. In this case, you can view the safe protect box in the Virtual Proofing System software. The safe protect box is not printed on the proof.

Select the **Safe Protect Box** check box and in each of the **Left**, **Right**, **Top**, and **Bottom** boxes, type the distance from the trim or media box that you want the safe protect lines to appear. You can type different numbers in each of the four sides.

When calculating where to place the safe protect lines, note that Prinergy measures from various starting points as shown in the following table.

Proof	Safe protect box is measured from this location
Imposition	The imposition hole trim box
Loose page	○ The PDF page trim box—if the PDF page includes trim ○ The PDF page media box—if the PDF page does not include trim If a PDF page includes trim, it appears in the Trim Size column in the Pages pane of the Pages view. Note: If the PDF page does not include trim, you can define it using the Prinergy Geometry Editor plug-in for Adobe Acrobat. After the trim is defined, refine the page again.

The lines of the safe protect box are drawn according to the option selected for trim and bleed marks:

- If you selected **Outside Content**, only the four corners of the safe protect box appear on the proof.
- If you selected **On Content**, the complete box is drawn on the proof.

Note: If you entered information for **Trim Adjustment**, the **Safe Protect Box** dimensions are calculated based on the **Trim Adjustment** dimensions.

Trim Adjustment

If you are using pages that have no trim or an incorrect trim box, in the **Trim Adjustment** area, type the distance from the edge of the page that you want trim lines to appear in each of the **Left**, **Right**, **Top**, and **Bottom** boxes.

You can type different numbers in each of the four sides.

Trim Adjustment is available only when you select **Draw Trim and Bleed Marks**, and **On Content** or **Outside Content**.

Note: If you enter information for **Trim Adjustment**, the **Safe Protect Box** dimensions are calculated based on the **Trim Adjustment** dimensions.

Locate Crop Mark of Length

Available if **On Content** or **Outside Content** is selected in the **Draw Trim and Bleed Marks** box.

Determines the length of the crop marks to be drawn, in the selected unit of measure.

The **at Distance** box determines how far away from content to draw the crop mark.

at Distance

Available when **On Content** or **Outside Content** is selected in the **Draw Trim and Bleed Marks** box.

Determines how far away from content to draw the crop mark.

Unit Used for Variable Marks

Select the unit you want to use to measure variable marks—inch, cm (centimeter), mm (millimeter), or pts (points).

Slugline

A slugline mark is a text or variable mark that you place on loose page, imposition, or final output. Instead of using **Sheet Marks** or **Page Marks**, you can use **Slugline** to quickly place a slugline mark.

A slugline mark does not need a PDF file, so you can easily place a mark without creating a PDF file. However, a slugline mark is just a line of text or a variable mark. You can only specify the text size.

- In the **Slugline mark** box, type the text or variable mark.
- In the **Text size** box, type the font size for the mark.
- In **Place on media**, specify the distance **from left** and **from bottom**.
- In **Rotation**, select **0**, **90**, **180**, or **270** to rotate the mark counterclockwise in 90-degree increments.
 - **From: (Left, Center, Right)**—sets the horizontal alignment of the slugline mark and the origin edge that the **From** setting shifts the content from.
 - **From: (Top, Center, Bottom)**—sets the vertical alignment of the slugline mark and the origin edge that the **From** setting shifts the content from.

Note: If you are using a variable mark in your slugline, the `_offset` and `_replace` parameters and any page-oriented variables parameters and barcode variables, are currently not supported.

Slugline font

Add font name that resides in C:\Windows\Fonts to override the default font for sluglines.

- The font must be installed on all servers (Primary and Secondary where the output JTPs are homed).
- The font must be ANSI based TrueType fonts (.ttf or ttc).
 - Some legacy windows .fon fonts may work, but most are raster based and are not supported.

Replace variable marks in PDF content files

Select this check box to enable variable text marks (for example, \$[color] or \$[job]) to be replaced when those marks are found in content PDFs placed within an imposition. Content PDFs are PDFs which make up the content of the finished product, the printed, cut, and bound page(s).

Clearing this check box means that only variable marks in mark PDFs will be replaced and that any variables present in content PDFs will be left as is. For example, if \$[color] appears within a content page it will still appear as \$[color] in output.

IMPORTANT: When using this setting you must follow the procedure outlined in Kodak Customer Portal Answer ID 69302. Failing to do so could result in serious output problems.

Text Marks Knock Out Content

By default, Variable marks overprint content, this setting will instead set those marks to Knock-out. Typically it will be used along with the setting 'replace variable marks in content'

[List of all Variable Marks](#)