

# Restoring the primary server to normal operation0

After the main primary server is repaired, revert to using it as the primary server and using the EPM server as a secondary server.

When you switch the EPM failover server back to secondary server status, the Prinergy system resumes normal operations with EPM protection again ready to use when needed. The original primary server and all secondary servers and render stations are connected correctly.