

Deleting all screens

You can remove all DotShop and unknown screens from a page.

- In the DotShop Properties Editor toolbar, click the **Delete all screens** button .

All DotShop and unknown screens on the page are deleted and the default screening for the entire page is reset to **From process template**.